High Voltage Battery Air Inlet Duct - Plug-In Hybrid Electric Vehicle (PHEV)

Removal

1. **WARNING: Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.**

   Refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).

2. Refer to: High Voltage Battery Disconnect and Connect - Plug-In Hybrid Electric Vehicle (PHEV) (414-03A High Voltage Battery, Mounting and Cables, General Procedures).

3.
   - Refer to: Loadspace Trim Panel LH (501-05 Interior Trim and Ornamentation, Removal and Installation).
   - Refer to: Loadspace Trim Panel RH (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

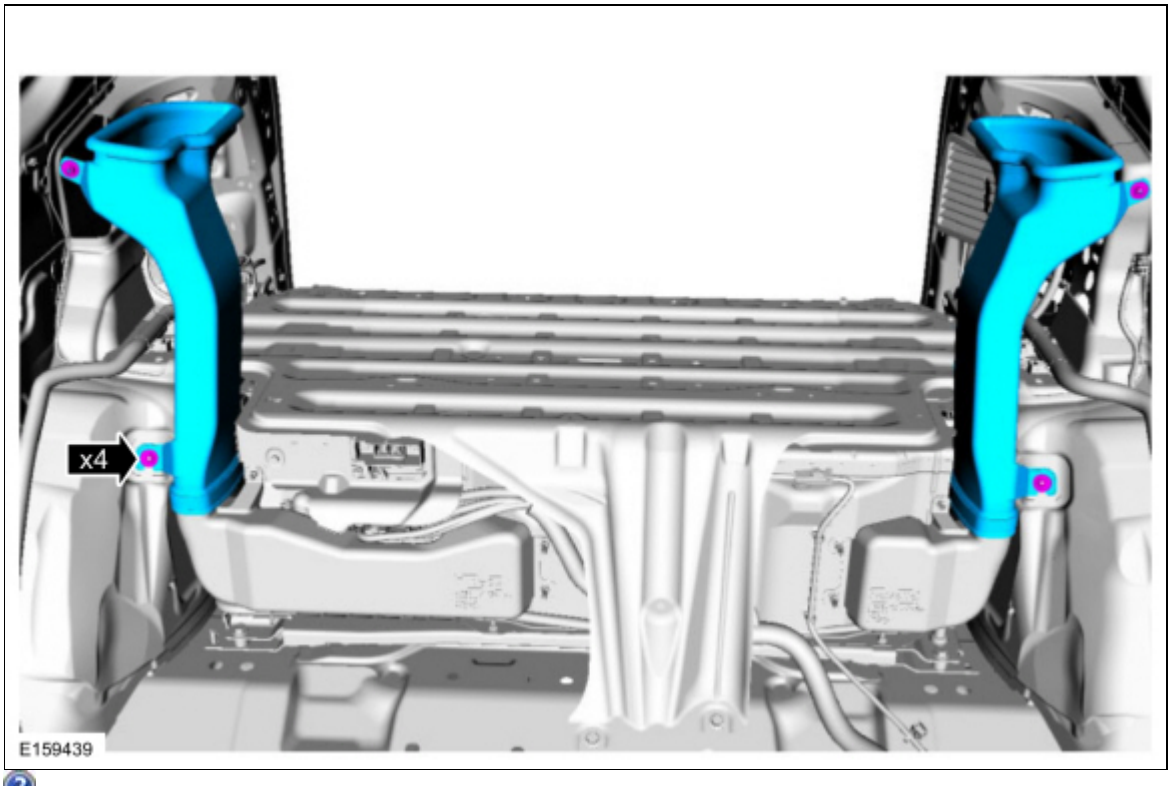

5. *Torque* : 7 Nm

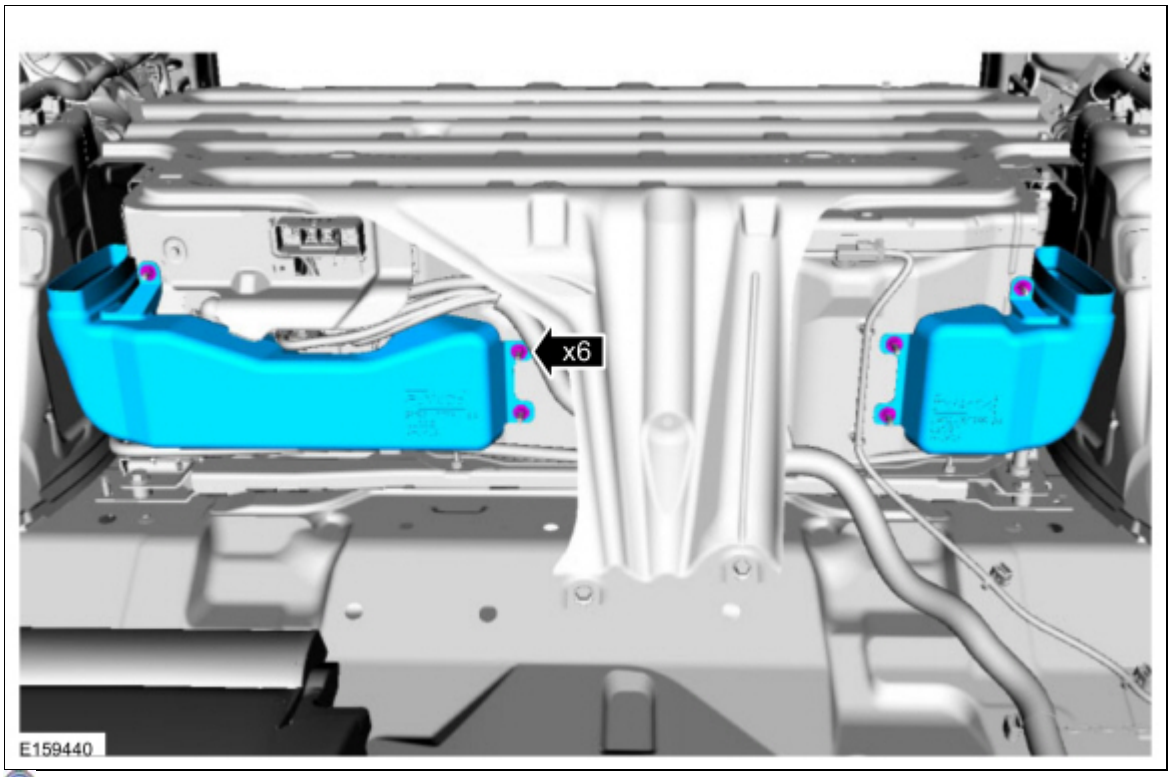

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company